



Fiber Optic 10/100 Base-T Ethernet
Transmission System

Installation Instructions

Part Numbers:

MXA/MXB-1R-x (one fiber)

(10/100 Base-T Ethernet Extender)

Meridian Technologies, Inc.
700 Elmont Road, Elmont NY 11003
Telephone : 516. 285. 1000 Fax: 516. 285. 6300
E-mail : sales@meridian-tech.com Web: www.meridian-tech.com
05/10 – Rev 1.2

Table of Contents

1.0	Product Description.....	3
2.0	Installation.....	3
3.0	Product Part Number Description.....	3
4.0	Data Connector Pin Assignment & MDI/MDI-X Configuration ...	4
5.0	Operation/Front Panel LED Indicators.....	6
6.0	Optical Specifications	7
7.0	Troubleshooting.....	7

MXA/MXB-1R-x **10/100 Base-T Ethernet Data Transmission System** **Installation Instructions**

1.0 Product Description

Meridian's MXA/MXB-1R-x products are 10/100 Base-T fiber optic Ethernet extender modems that transmit & receive one channel of bi-directional 10/100 Base-T Ethernet data over optical fibers using digital transmission technologies. The MXA/MXB-1R-x is the stand-alone model. This product is powered by internal switching power supply and will accept 12-24VAC or DC. (Part # WP-24A customer supplied)

Both ST and FC optical connectors are supported, depending on the part number. An ST optical interface is available for both multimode and singlemode fiber applications while the FC optical interface is available only on singlemode products. Optional conformal coating provides an additional level of protection from environments with high humidity.

2.0 Installation

The MXA/MXB-1R-x is a shelf mount module and can be mounted in either a horizontal or vertical configuration. A 2-pin plug-in connector is located on the side of the module for power. Meridian recommends the WP-24A transformer for proper operation of this module.

3.0 Product Part Number Description

The MXA/MXB-1R-x series products are available in one fiber version. In addition, both singlemode and multimode fiber are supported. The table below lists the various part numbers and their optical transmission characteristics:

Module Part #		# Fibers	Fiber Type	Optical Connector(s)
MXA-1R-2	MXB-1R-2	1	Multimode	ST
MXA-1R-5	MXB-1R-5	1	Singlemode	FC
MXA-1R-5/ST	MXB-1R-5/ST	1	Singlemode	ST

The tables below identify the specifications for the various signals that these modems transmit/receive.

Data	
Formats	IEEE 802.3 CSMA/CD IEEE 802.3i 10Base-T IEEE 802.3u 100Base-T
Date Rate	10/100 Mb/s, Auto select
Bit Error Rate (BER)	Better than 10 ⁻⁹

Connectors	
Data	RJ-45
Optical	Singlemode – ST or FC Multimode - ST

4.0 Data Connector Pin Assignment & MDI/MDI-X Configuration

This product series utilizes an RJ-45 Ethernet data connector with standard pin assignments. In addition, these Meridian modems can be configured for both MDI & MDI-X (cross-connect) configurations. The table below shows these pin assignments for both MDI and MDI-X configurations.

Pin #	MDI Configuration	MDI-X Configuration
1	Transmit (+)	Receive (+)
2	Transmit (-)	Receive (-)
3	Receive (+)	Transmit (+)
4	N/A	N/A
5	N/A	N/A
6	Receive (-)	Transmit (-)
7	N/A	N/A
8	N/A	N/A

MXA-1R-x module come pre-configured for MDI connection that connects to LAN. And MXB-1R-x module come pre-configured for MDI-X connection that connects to Computer. Changing to an MDI or MDI-X configuration is simple. See the photograph below in Figure 4.1 for the jumper location that is used to convert the module from an MDI to and MDI-X configuration.

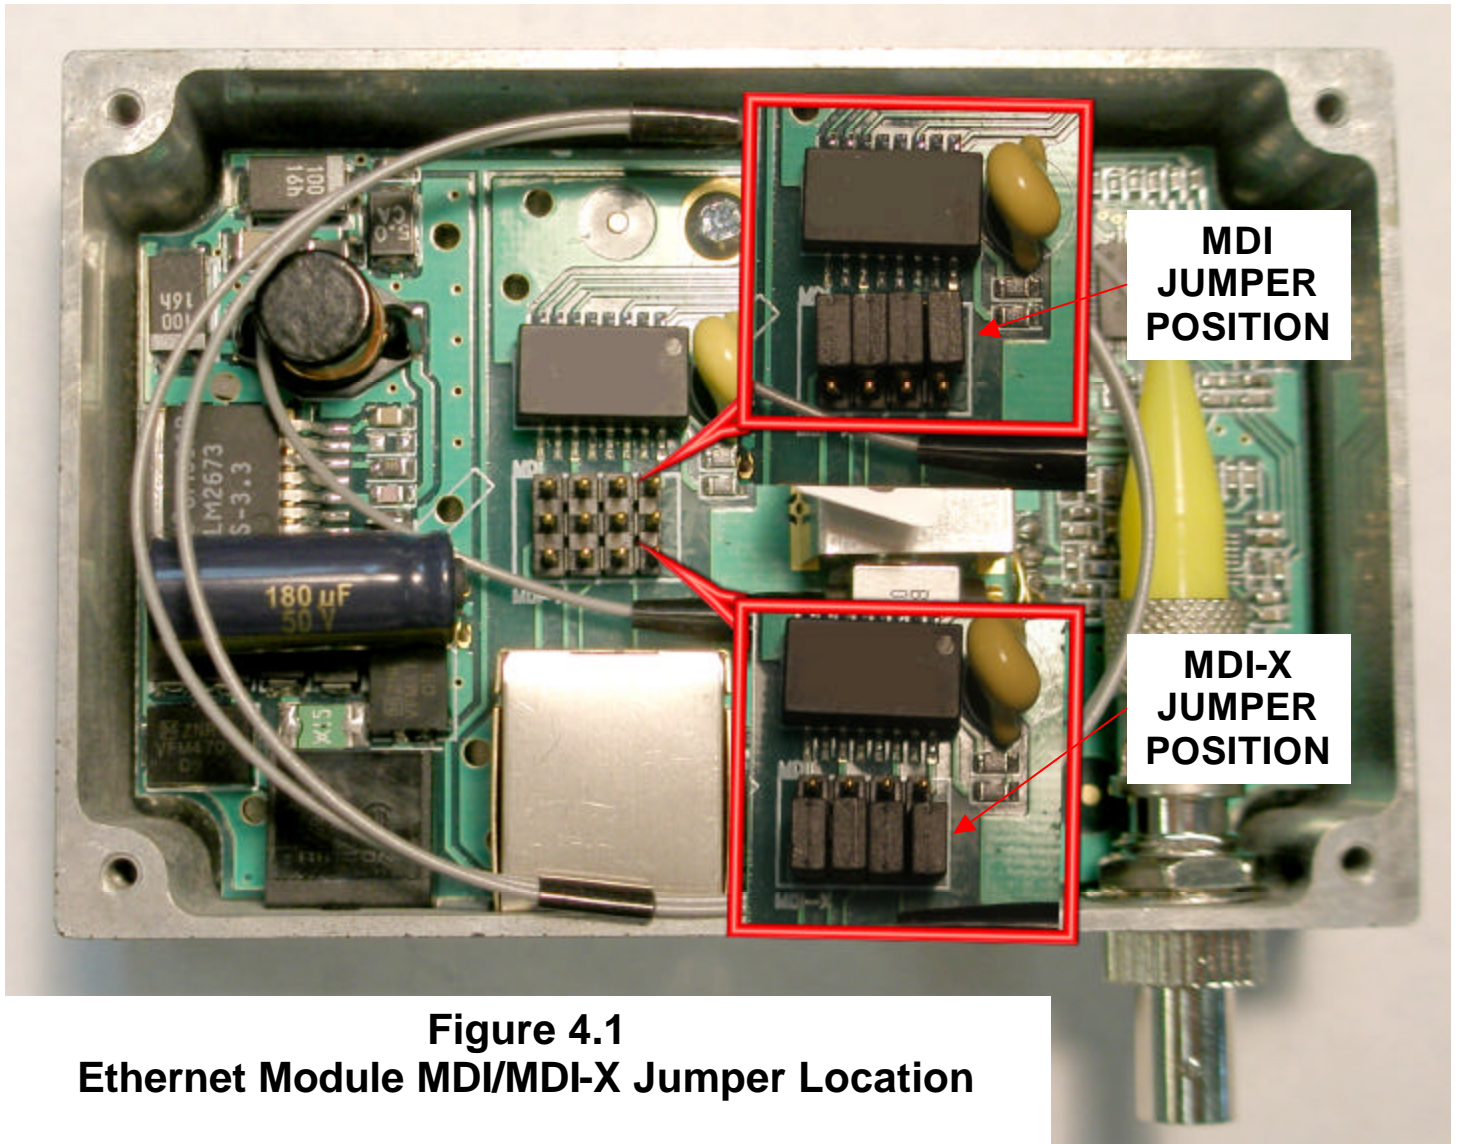


Figure 4.1
Ethernet Module MDI/MDI-X Jumper Location

Directly behind the RJ-45 Ethernet connector is the four jumpers that converts the module from its MDI configuration to the MDI-X (cross connect) configuration. Follow the steps below to change connection configurations

1. Position the module as shown in the above photograph and remove the side cover by removing the 4 screws in the corners of the side cover.
2. Locate the jumpers on it. This will be directly behind the RJ-45 connector and pull directly upwards (away from the circuit board) being careful not to bend the pins on the circuit board.
3. Move the jumpers toward the RJ-45 connector and place back on the header, being careful not to bend the jumper leads on the circuit board. Seat firmly on the leads.
4. Replace side cover and secure with the 4 screws.
5. Repeat, as required, with the other unit.

6.0 Optical Specifications

The table below lists the optical specifications for both singlemode and multimode fiber applications.

Optical Specifications						
Fiber Type/Size (um)	Optical Output (dBm)	Rx Sensitivity (dBm)	Optical Budget (dB)	Wavelength (nm)	Optical connector	Optical Dynamic Range (dB)
Multimode (FP Laser) 62.5/125	-6	-27	21	1300/850	ST	24
Singlemode (FP Laser) 9/125	-6	-27	21	1310/1550	ST, FC	24

7.0 Troubleshooting

Below is a listing of several problems that may arise during the installation & operation of the modules. If you are having difficulty installing or operating the modules please refer to this list below.

Problem: *No Data*

Action: 1 – One fiber units (MXA/MXB) – Check to ensure that an MXA unit is optically connected to an MXB unit. An MXA or an MXB will not communicate with a module of the same type MXA or MXB.
2 - Check that both of the modules have the MDI/MDI-X jumpers set correctly for the application.

If the problem still persists after reviewing the above items, please contact Meridian technical support (516-285-1000).

Notes:



Meridian Technologies, Inc.
700 Elmont Road, Elmont NY 11003
Telephone: 516-285-1000 Fax: 516-285-6300
E-mail: sales@meridian-tech.com
Web: www.meridian-tech.com
Document Version 1.2
05/05/2010