



## **Installation/Operation Instructions**

### **Fiber Optic Video Transmission System**

#### **Part Number:**

**DT-xV-x**

*(Multi-channel Video Transmitter)*

**DR-xV-x**

*(Multi-channel Video Receiver)*



## **Table of Contents**

<b>1.0 Product Description.....</b>	<b>3</b>
<b>2.0 Product Specifications .....</b>	<b>4</b>
<b>3.0 Installation .....</b>	<b>4</b>
<b>4.0 Front Panel Layout .....</b>	<b>5</b>
<b>5.0 Troubleshooting.....</b>	<b>9</b>

## 1.0 Product Description

The DV-xV (W)-x series is a multi-channel video fiber optic digital video transmission system capable of transmitting from four (4) to eight (8) composite video signals over one multimode or singlemode optical fiber using digital transmission technologies. The DV-xV series is compatible with NTSC, PAL and SECAM video signals.

This product series uses Meridian's standard 2-slot wide chassis mount card assembly and plugs into the following Meridian chassis: SR-1000/S, SR-1200/S, SR-1500/S, and SR-2001 & SR-2000 series 19" equipment chassis.

Below is a listing of the various models available:

<b>Video Tx/Rx Module Variations</b>					
<b>Tx Model</b>	<b>Rx Model</b>	<b># Video Channels</b>	<b>Digital resolution</b>	<b>Fiber interface</b>	<b>Optical Connector</b>
DT-4V-1	DR-4V-1	4	8-bit	Multimode	ST
DT-4V-3	DR-4V-3	4	8-bit	Singlemode	FC
DT-4V-3/ST	DR-4V-3/ST	4	8-bit	Singlemode	ST
DT-6V-1	DR-6V-1	6	8-bit	Multimode	ST
DT-6V-3	DR-6V-3	6	8-bit	Singlemode	FC
DT-6V-3/ST	DR-6V-3/ST	6	8-bit	Singlemode	ST
DT-8V-1	DR-8V-1	8	8-bit	Multimode	ST
DT-8V-3	DR-8V-3	8	8-bit	Singlemode	FC
DT-8V-3/ST	DR-8V-3/ST	8	8-bit	Singlemode	ST
DT-4W-1	DR-4W-1	4	10-bit	Multimode	ST
DT-4W-3	DR-4W-3	4	10-bit	Singlemode	FC
DT-4W-3/ST	DR-4W-3/ST	4	10-bit	Singlemode	ST
DT-6W-1	DR-6W-1	6	10-bit	Multimode	ST
DT-6W-3	DR-6W-3	6	10-bit	Singlemode	FC
DT-6W-3/ST	DR-6W-3/ST	6	10-bit	Singlemode	ST
DT-8W-1	DR-8W-1	8	10-bit	Multimode	ST
DT-8W-3	DR-8W-3	8	10-bit	Singlemode	FC
DT-8W-3/ST	DR-8W-3/ST	8	10-bit	Singlemode	ST

The digital modules consist of various plug-in personality function cards or SIMs. In addition to the optical SIM located at the top of the modules, the DV-xV series utilizes two to four, 2-channel video SIM cards. The optical output (Tx) connector is located on the left side of the transmitter module while the optical input (Rx) connector is located on the right side of the receiver module. The second through the fifth SIMs contain the video coaxial interfaces.

## 2.0 Product Specifications

The tables below identify the key specifications for the video signals that these modems transmit/receive.

<b>Video</b>		
	<b>10-bit Video</b>	<b>8-bit Video</b>
Format	NTSC, PAL, SECAM	NTSC, PAL, SECAM
Voltage/Impedance	1Vp-p, 75Ω, 1.5Vp-p (max)	1Vp-p, 75Ω, 1.5Vp-p (max)
Differential Gain	<0.6%	<0.6%
Differential Phase	<0.3°	<0.3°
SNR	>67dB (weighted)	>60dB (weighted)
Return Loss	>30dB	>30dB
Field Tilt	<0.5%	<0.5%

<b>Connectors</b>	
Video	75Ω BNC w/gold center pin
Optical	Singlemode – ST or FC Multimode - ST

Fiber Type/Size (um)	Optical Output (dBm)	Rx Sensitivity (dBm)	Optical Budget (dB)	Wavelength (nm)	Optical connector	Optical Dynamic Range (dB)
Multimode (FP Laser) 62.5/125	-3	-22	19	850	ST	22
Multimode (FP Laser) 62.5/125	-3	22	19	1300	ST	22
Singlemode 9/125	-3	22	19	1310	ST, FC	22
Singlemode 9/125	+2	-22	24	1310DFB	ST, FC	22
Singlemode 9/125	+3	-22	25	1550DFB	ST, FC	22

## 3.0 Installation

Series DV-xV series products are two-slot wide cards and, as such, occupies two slots in Meridian's standard chassis (SR-1000/S, SR-1200/S, SR-1500/S, and SR-2001 & SR-2000 series 19" equipment chassis). To install in the chassis, orient the card with the Meridian logo at the top of the module and slide onto the top and bottom card guides in the chassis. Press securely on the top and bottom of the module to ensure that it is fully seated in the chassis so that the electrical connector mates with the chassis-mounted motherboard. Once installed, manually tighten the two thumbscrews located at the top and bottom of the card. Do not use tools to secure these and do not over tighten.

**Note:** A fully loaded subrack should have forced-air cooling to avoid excessive heat generation inside the chassis. A fan assembly tray (P/N FA-2000) with three (3) fans is available and should be installed under the 19" SR-2000/1 whenever possible.

## 4.0 Front Panel Layout


The figures below show the connector and LED indicator locations for the 8-channel transmitter and receiver modules, respectively. There are a number of diagnostic indicators on the front panel of each module. In addition, each of the video input/output channels has indicators associated with them to provide quick visual indications of the channel activity. These indicators are listed below:

<b>Transmitter (DT-xV) Indicators</b>		
<b>Indicator</b>	<b>Location</b>	<b>Function</b>
Tx carrier	Under optical output connector	Optical output (Green – OK, Red – error)
Power	Left side of module	Green – ON
Video #1 (each input)	Under video input connectors	Green – Sync received
Video #2 (each input)	Under video input connectors	Video signal – Green OK, Red – video overload


<b>Receiver (DR-xV) Indicators</b>		
<b>Indicator</b>	<b>Location</b>	<b>Function</b>
Rx Optical signal	Under optical output connector	Optical input (Green – OK, Red – error)
Rx Carrier	Under optical output connector	Optical Carrier input (Green – OK, Red – error)
Power	Left side of module	Green – ON
Video #1 (each input)	Under video input connectors	Green – Sync received
Video #2 (each input)	Under video input connectors	Video signal – Green OK, Red – video overload

The front panel layouts for the DT/DR-4V(W) and DT/DR-6V(W) and DT/DR-8V(W) products are shown below. The only difference in the modules is in the number of video coaxial input/output connectors located on each of the modules.


DT-4V(W)-x  
PINOUT DIAGRAM

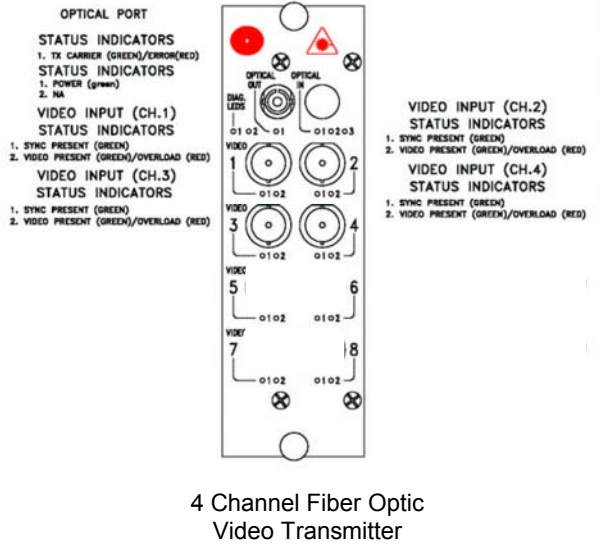


DR-4V(W)-x  
PINOUT DIAGRAM

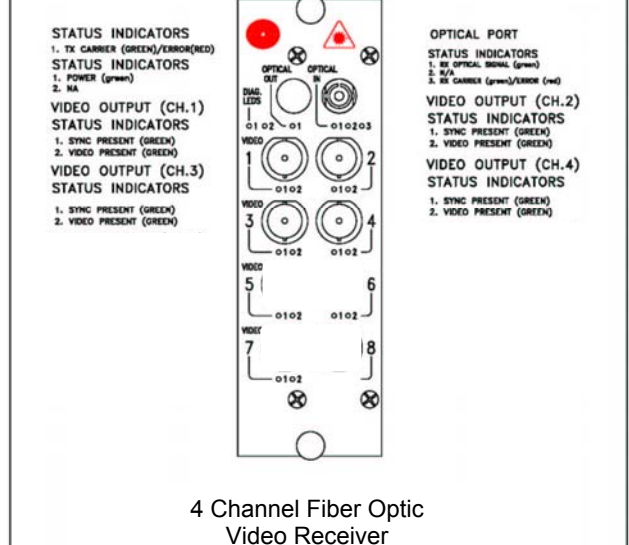


DT-6V(W)-x  
PINOUT DIAGRAM

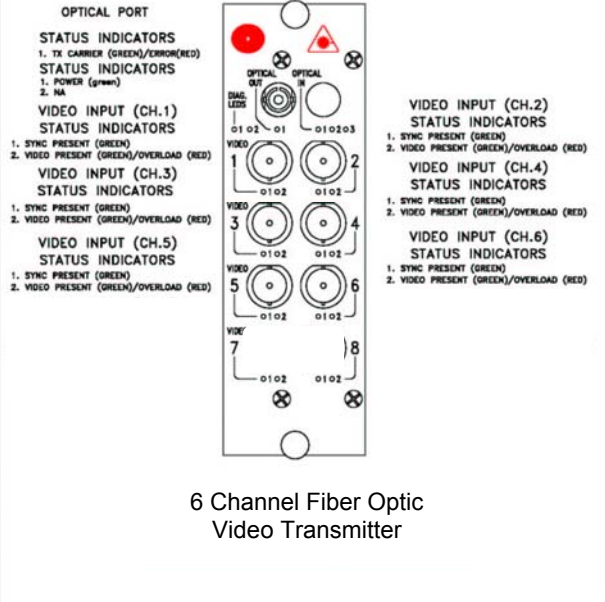

DR-6V(W)-x  
PINOUT DIAGRAM

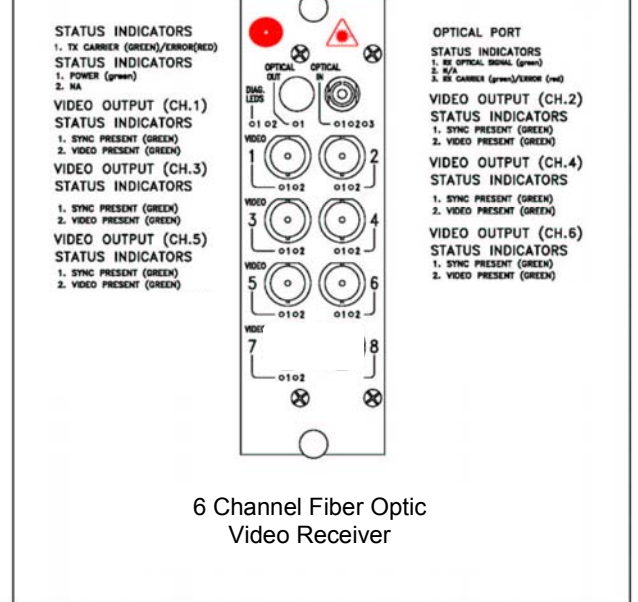


**DT-8V(W)-x**  
PINOUT DIAGRAM

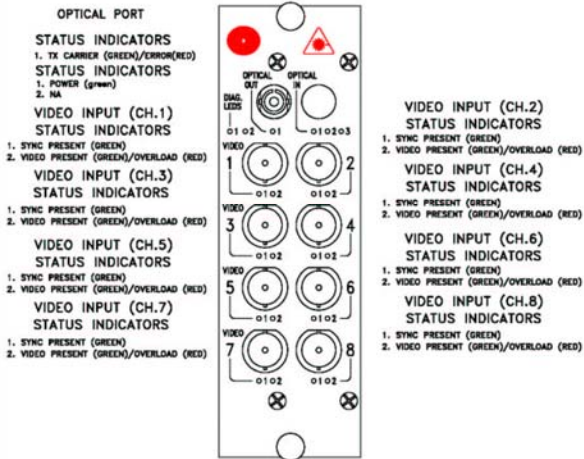

8 Channel Fiber Optic  
Video Transmitter

**DR-8V(W)-x**  
PINOUT DIAGRAM

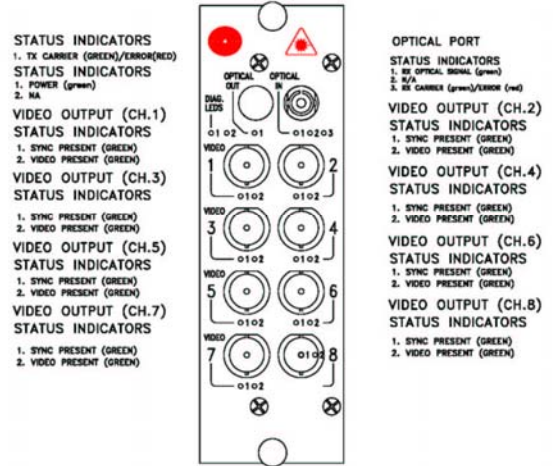

8 Channel Fiber Optic  
Video Receiver

## 5.0 Troubleshooting

Below is a listing of several problems that may arise during the installation & operation of the modules. If you are having difficulty installing or operating the modules please refer to this list below.

**Problem:** *Module does not fit in chassis slots*

**Action:** Check module orientation. Meridian “Globe” must be oriented on the top left hand side of the module  
Make sure the card guides in the chassis are aligned with the extrusion on the module

**Problem:** *Card power LED does not light when power to the module/subrack is applied or power indicator turns on and off*

**Action:** Check power supply to ensure that it is plugged in and turned on. If flashing continues, move module to another chassis or location in the same chassis, if available.

**Problem:** *No video at output of module*

**Action:** Check to ensure that the video channel-specific LEDs are on (Green). Also, check to ensure that the optical LEDs are ON. If no video is still present, check to ensure that the monitor is ON and the video cable is connected to the correct video port on the Rx module.

**Problem:** *Video image is dark*

**Action:** Check the iris control on the camera to ensure that it is open to the proper amount for the conditions

**Problem:** *Video image is too bright and appears overexposed*

**Action:** Check the Video overload indicator on the Rx module. If it is Red, the video signal level is too high and the CCTV iris should be checked to ensure that it is open properly for the conditions.

If the problem still exists after reviewing the above items, please contact Meridian technical support (516-285-1000).